


WHØA PADDLE SPEAR

INCLUDED

NOT
INCLUDED



Kayak Paddle Spear

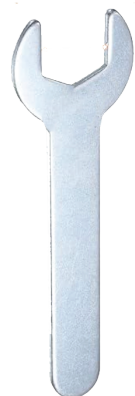

Hex Wrench



STEP 1

Separate paddle at pin-lock



STEP 2

Insert paddle spear into shaft above pin-lock

Tighten the bolt clockwise with the hex wrench until it's firmly seated. Stop when it becomes difficult to turn—do not overtighten.



STEP 3

Insert handle shaft back into paddle shaft.



IMPORTANT

Keep Spear sheathed at all times when not in use.



INSTALLING YOUR WHØA PADDLE SPEAR

Separate paddles at the pin-lock (middle)

- Once separated you will have both a male and female shaft. The male shaft has the pin-lock mechanism

Insert the WHØA Paddle Spear into the male shaft

- Slide the spear into the hollow paddle shaft until the top of the silicone plug is fully seated and the base of the spear meets the end of the shaft.
- It should be a snug fit.

Secure the Spear

- Use the provided hex wrench to tighten the bolt clockwise until it feels secure and no longer turns easily.
- Note: Due to slight variations in paddle shaft diameters, the silicone insert may require slight adjustment.

If the spear is tight going in:

- Try twisting or gently wiggling it into place.
- Or, slightly loosen the spear (turn counterclockwise) to decompress the silicone plug, insert fully, then retighten.

If the entire spear base spins when tightening:

- This means the fit is too loose. Remove it, slightly tighten the spear outside the shaft, and reinsert.
- Repeat as needed until the spear seats snugly and stays in place when you tighten it.

Reattach Your Paddles

- Reinsert the male shaft into the female paddle shaft and engage pin-lock mechanism.

Important Safety Note

The WHØA Spear is very sharp. Do not remove it from the paddle shaft unless absolutely necessary. Handle with care at all times.